

EN **Assembly Guide**
for B21 Metal Enclosure

Model: RP512BM21
for ProSYS™Plus and LightSYS™

IT **Istruzioni per il montaggio del**
contenitore metallico B21

Modello: RP512BM21
per ProSYS™Plus e LightSYS™

ES **Guía de montaje**
de la Caja Metálica B21

Modelo: RP512BM21
para ProSYS™Plus y LightSYS™

FR **Guide d'assemblage**
pour boîtier métallique B21

Modèle : RP512BM21
pour ProSYS™Plus et LightSYS™

NL **Montage handleiding voor de B21**
Metalen behuizing

Model: RP512BM21
voor ProSYS™Plus en LightSYS™



EN

Wall Mounting (ProSYS Plus and LightSYS)

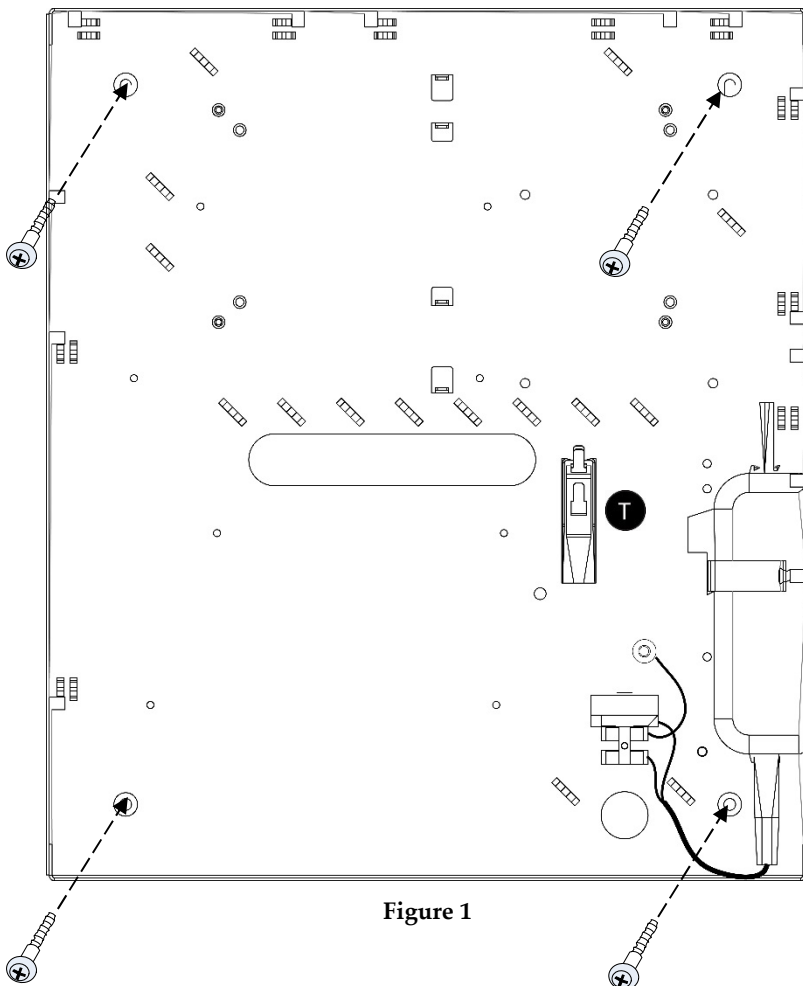


Figure 1



ProSYS Plus Assembly

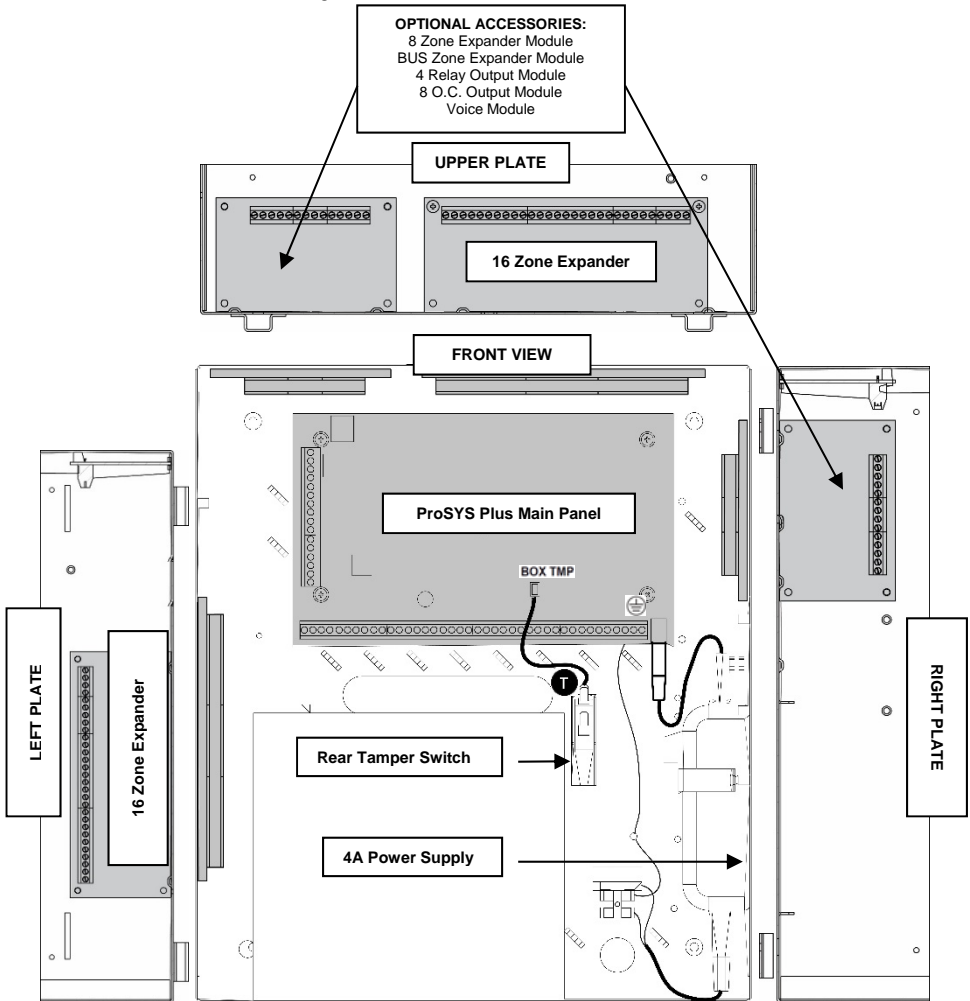




Figure 2

1. Install ProSYS Plus PCB as displayed above (figure 2).
2. Install optional accessories as required.
3. Connect the rear tamper lead  to the BOX TMP plug.
4. Connect the grounding wire to the  connection on the terminal block
5. Connect the 4A PS lead to the PCB power connector.



LightSYS Assembly

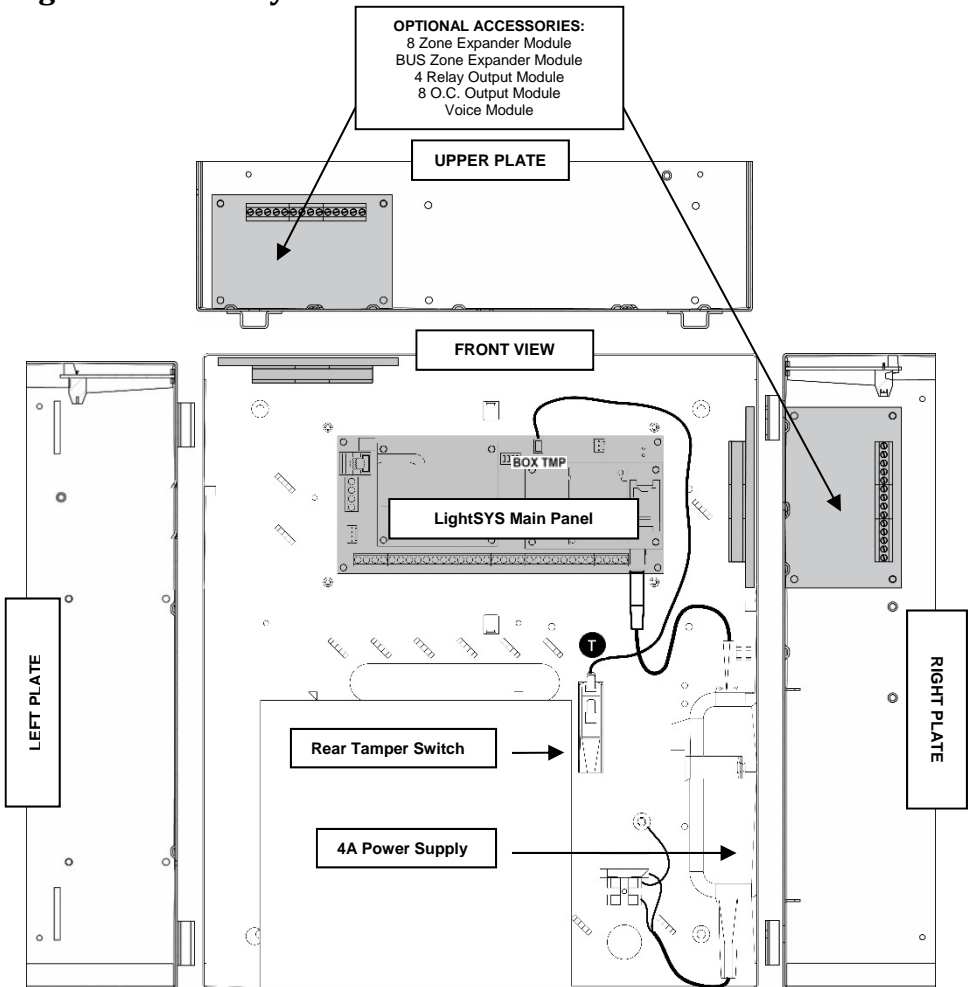


Figure 3

1. Install the LightSYS PCB as displayed above (figure 3).
2. Install optional accessories as required.
3. Connect the rear tamper lead **T** to the BOX TMP plug.
4. Connect the 4A PS lead to the PCB power connector.



Specifications:

Dimensions:	375 mm x 330 mm x 98 mm
--------------------	-------------------------

Standards (ProSYS Plus):

EN50131-3 Grade 3 Environmental class II
--

Ordering Information:

Model	P/N	Description
RP512BM21	RP512BM2100A	Metal box for ProSYS Plus and LightSYS



IT

Montaggio a parete (ProSYS Plus e LightSYS)

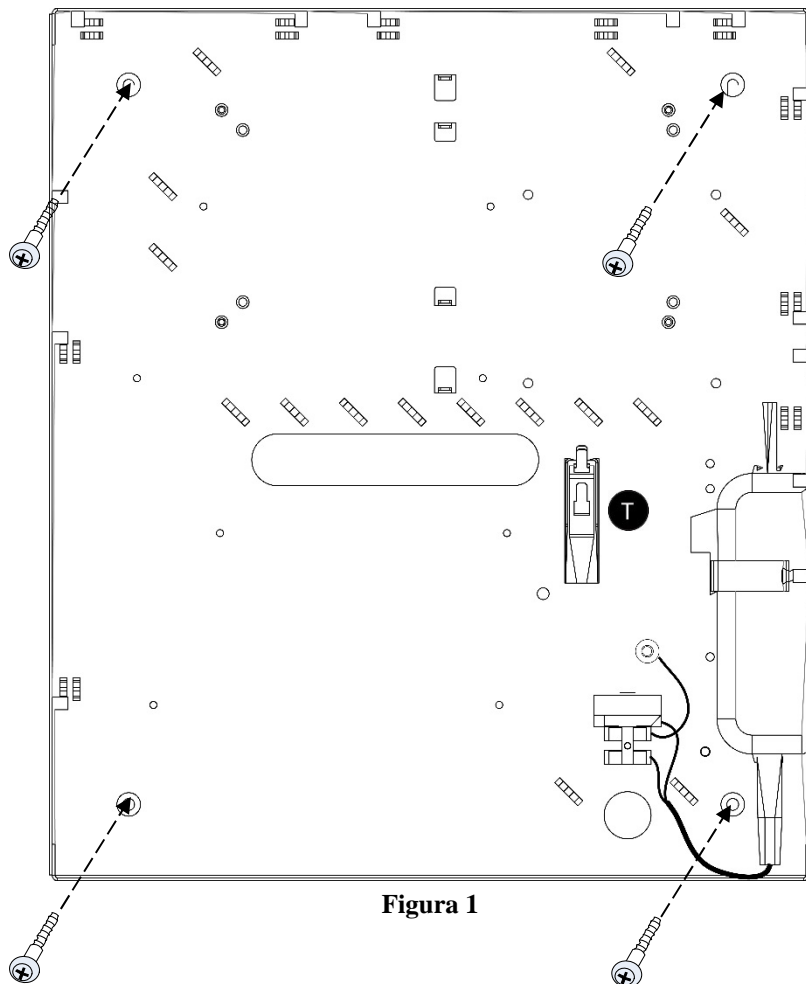


Figura 1



Montaggio per ProSYS Plus

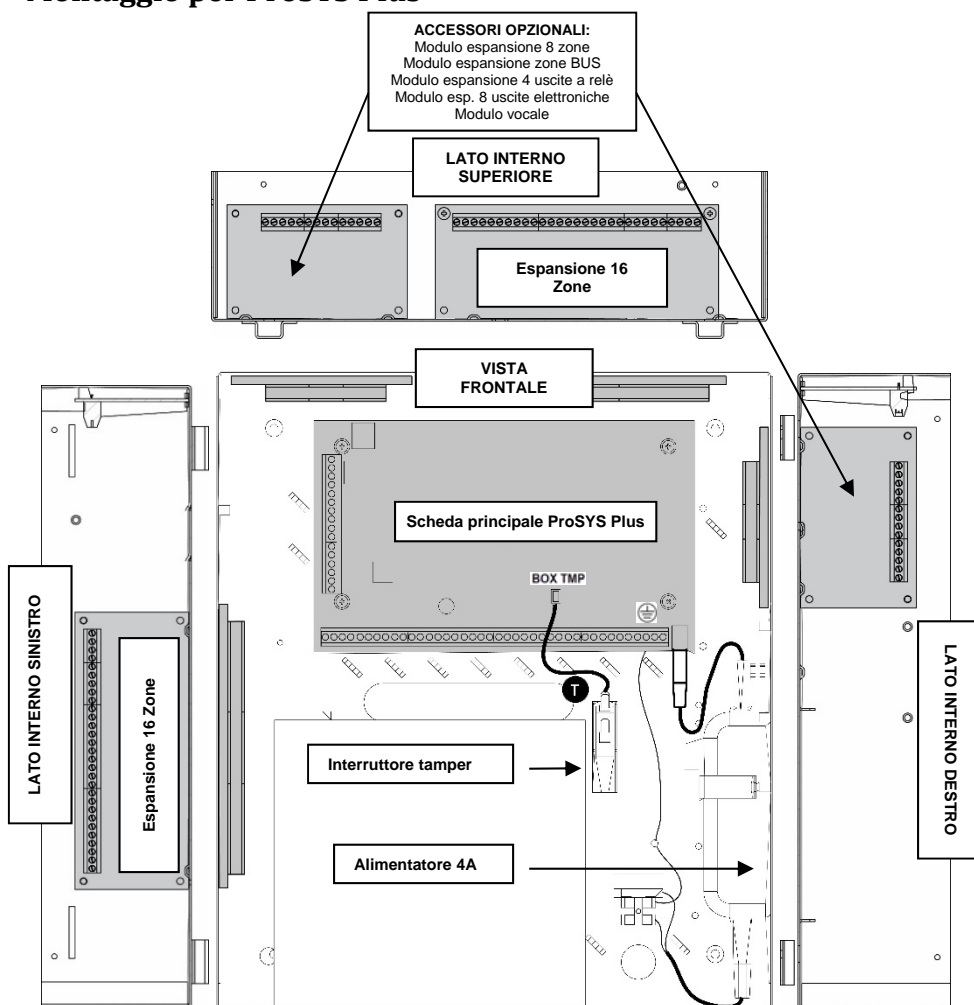


Figura 2

1. Installare la scheda principale ProSYS Plus come illustrato sopra (figura 2).
2. Installare gli accessori opzionali richiesti.
3. Connettere il cavetto dell'interruttore tamper **1** al connettore BOX TMP.
4. Connettere il cavo di terra al morsetto **⊕** della morsettiera inferiore.
5. Connettere il cavo dell'alimentatore 4A al connettore di alimentazione della scheda elettronica.



Montaggio per LightSYS

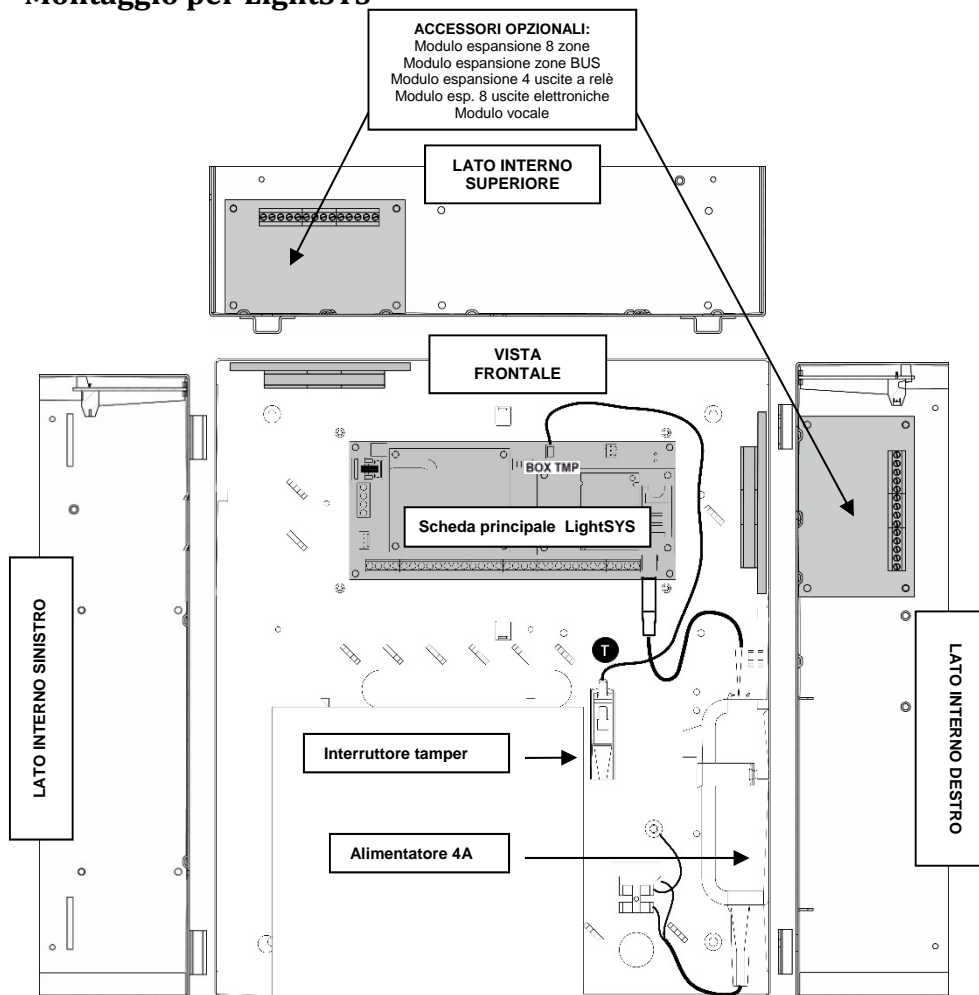


Figura 3

1. Installare la scheda principale LightSYS PCB come illustrato sopra (figura 3).
2. Installare gli accessori opzionali richiesti.
3. Connettere il cavetto dell'interruttore tamper **T** al connettore BOX TMP.
4. Connettere il cavo dell'alimentatore 4A al connettore di alimentazione della scheda elettronica.



Specifiche:

Dimensioni:	375 mm x 330 mm x 98 mm
--------------------	-------------------------

Standards (ProSYS Plus):

EN50131-3 Grade 3 Environmental class II
--

Codici prodotto:

Modello	P/N	Descrizione
RP512BM21	RP512BM2100A	Contenitore metallico per ProSYS Plus e LightSYS



ES

Montaje en pared (ProSYS Plus y LightSYS)

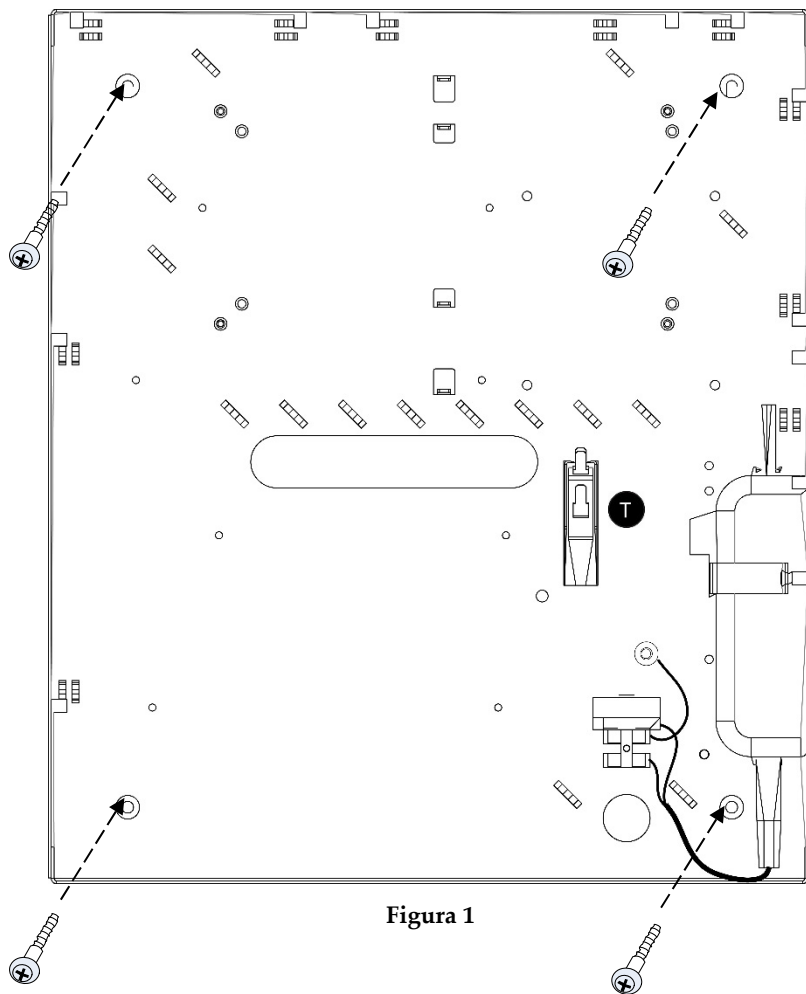


Figura 1



Montaje de ProSYS Plus

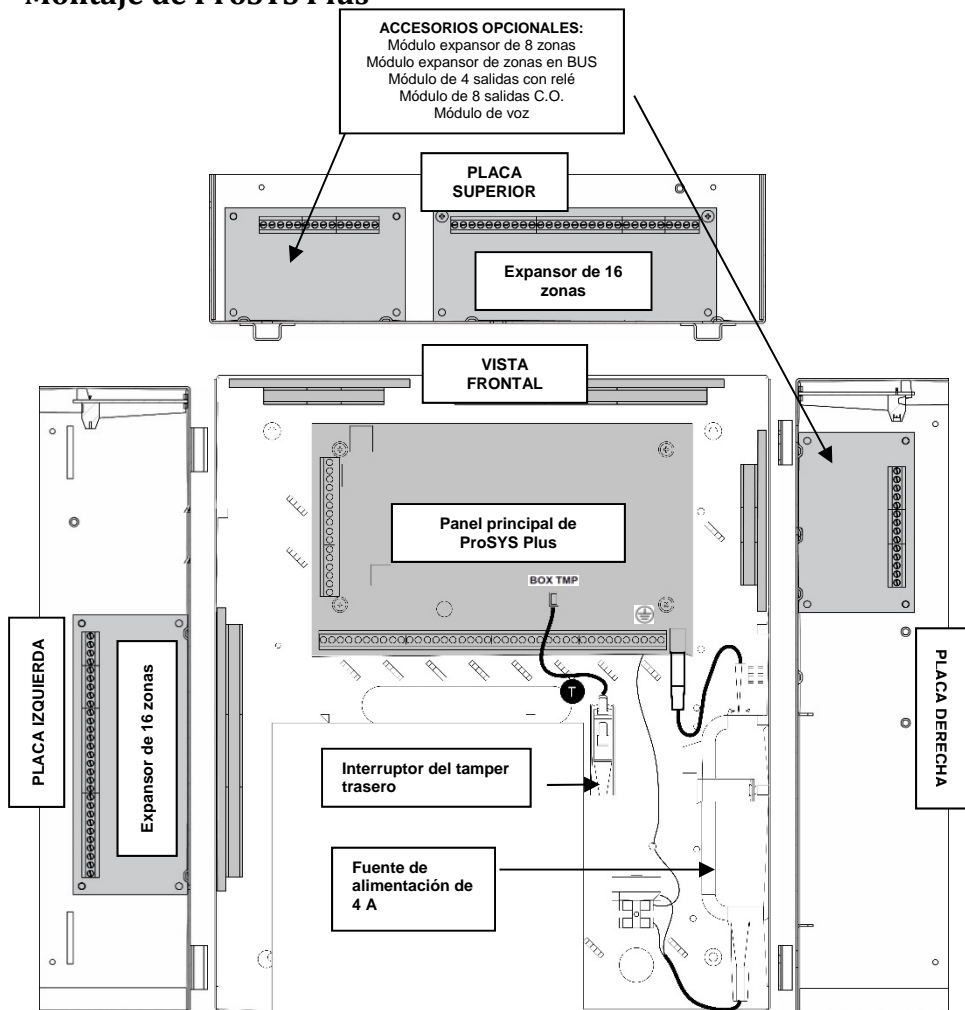


Figura 2

1. Instalar la placa de ProSYS Plus tal como se indica arriba (Figura 2).
2. Instalar los accesorios opcionales necesarios.
3. Conectar el cable del tamper trasero ① al conector BOX TMP.
4. Conectar el cable de tierra a la conexión ⊕ en el bloque de terminales.
5. Conectar el cable de alimentación de 4A al conector de alimentación de la placa principal.



Montaje de LightSYS

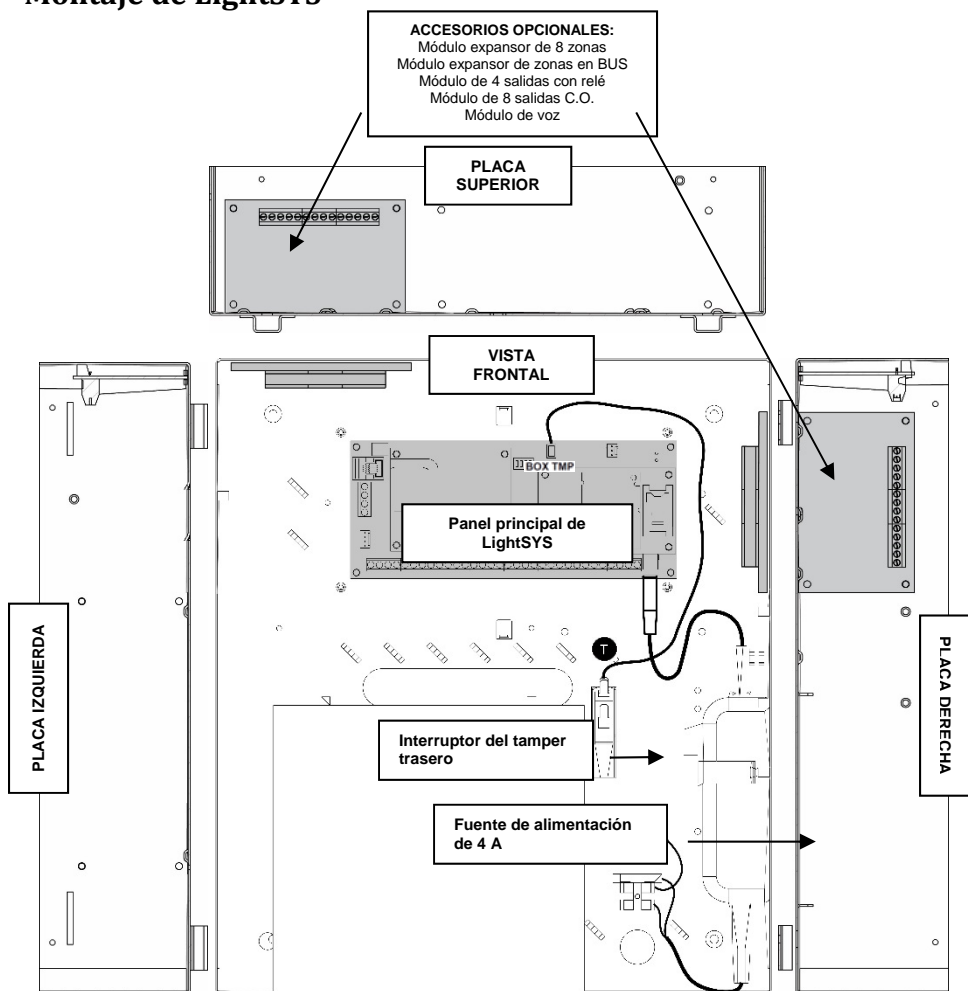


Figura 3

1. Instalar la placa de LightSYS tal como se indica arriba (Figura 3).
2. Instalar los accesorios opcionales necesarios.
3. Conectar el cable del tamper trasero **T** a la toma BOX TMP.
4. Conectar el cable de alimentación de 4A al conector de alimentación de la placa principal.



Especificaciones:

Dimensiones	375 mm x 330 mm x 98 mm
--------------------	-------------------------

Estándares (ProSYS Plus):

EN50131-3 Grado 3 y Clase II Medioambiental

Información para pedidos:

Modelo	Número de referencia	Descripción
RP512BM21	RP512BM2100A	Caja Metálica para ProSYS Plus y LightSYS



FR

Montage mural (ProSYS Plus et LightSYS)

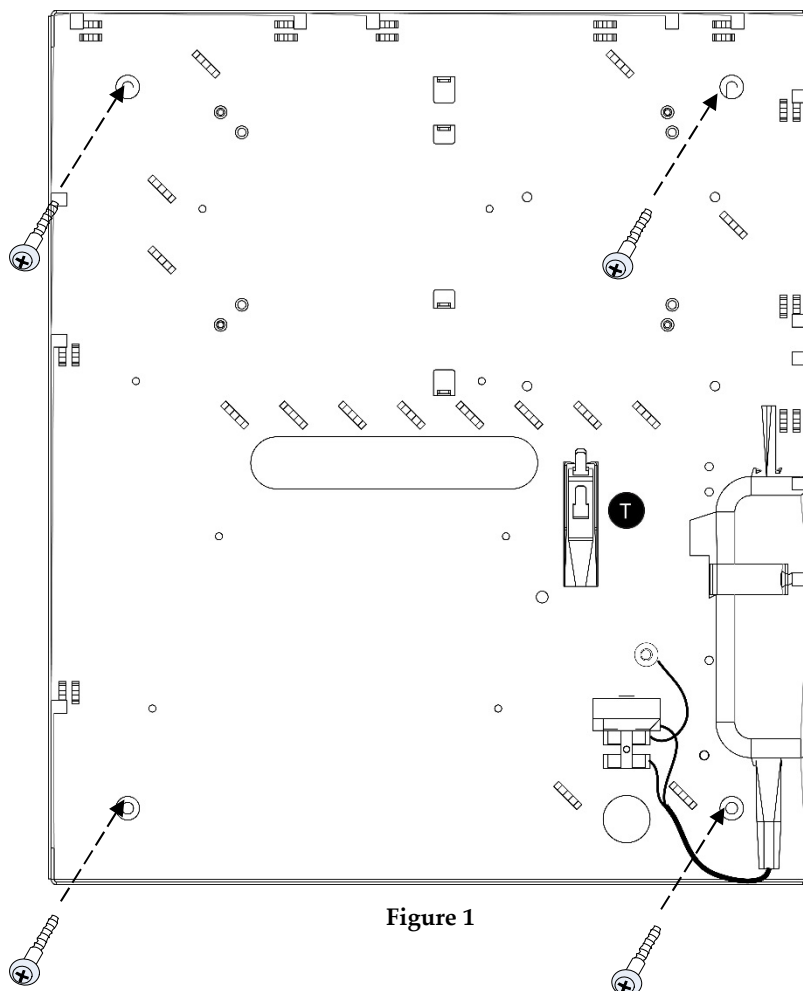


Figure 1



Assemblage ProSYS Plus

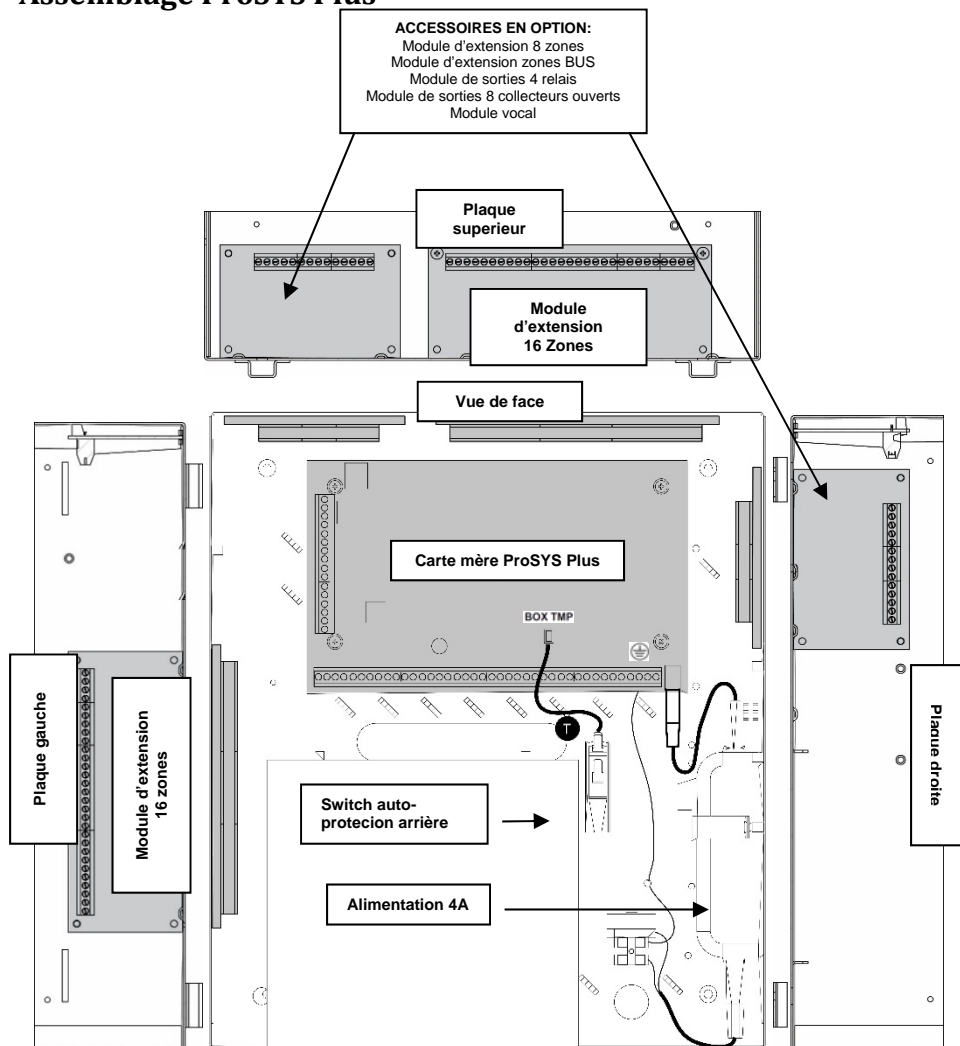




Figure 2

1. Installer la carte mère ProSYS Plus comme indiqué ci-dessus (figure 2).
2. Installer si besoin les accessoires optionnels.
3. Connecter le câble d'auto-protection arrière  au connecteur BOX TMP.
4. Connecter le câble de terre sur le bornier de la carte mère .
5. Connecter l'alimentation 4A au bornier d'alimentation de la carte mère.



Assemblage LightSYS

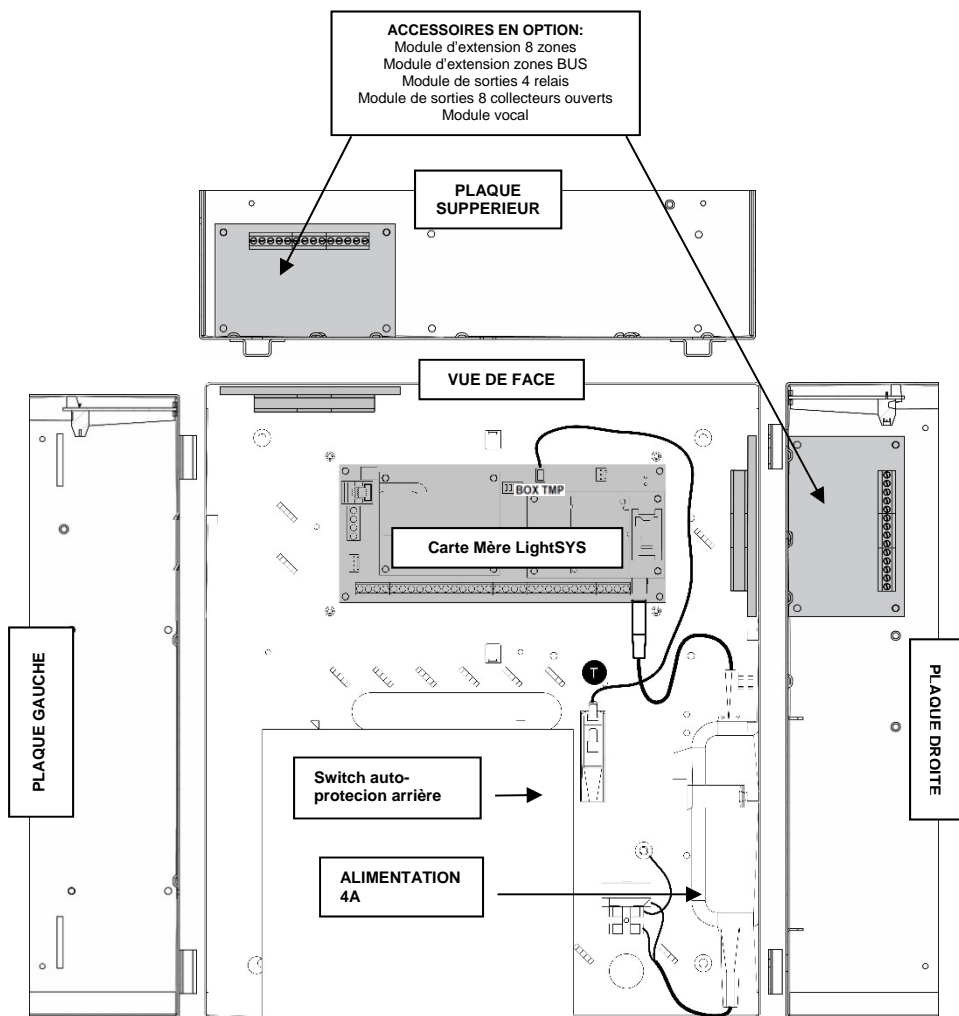


Figure 3

1. Installer la carte mère LightSYS comme indiqué ci-dessus (figure 3).
2. Installer si besoin les accessoires optionnels.
3. Connecter le câble d'auto-protection arrière ① au connecteur BOX TMP.
4. Connecter le câble de terre sur le bornier de la carte mère ②
5. Connecter l'alimentation 4A au bornier d'alimentation de la carte mère.



Spécifications:

Dimensions:	375 mm x 330 mm x 98 mm
--------------------	-------------------------

Standards (ProSYS Plus):

EN50131-3 Grade 3 Environmental class II
--


Référence:

Model	P/N	Description
RP512BM21	RP512BM2100A	Boîtier Metal pour ProSYS Plus et LightSYS



NL


Muur montage (ProSYS Plus en LightSYS)

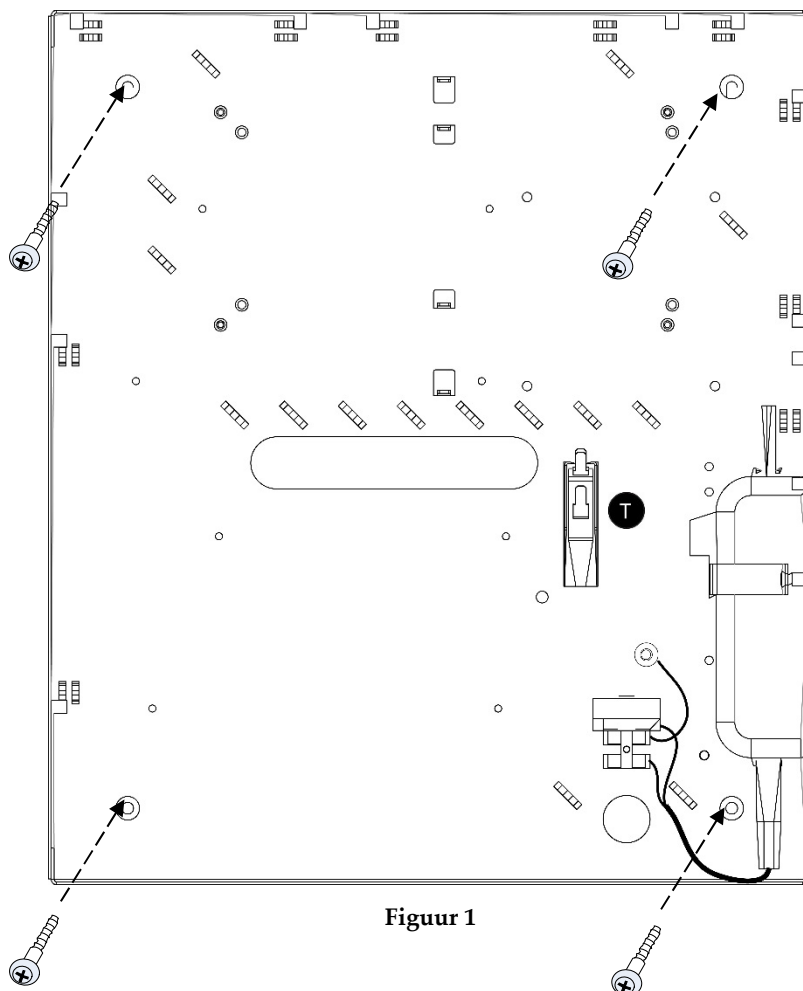

Figuur 1



ProSYS Plus montage

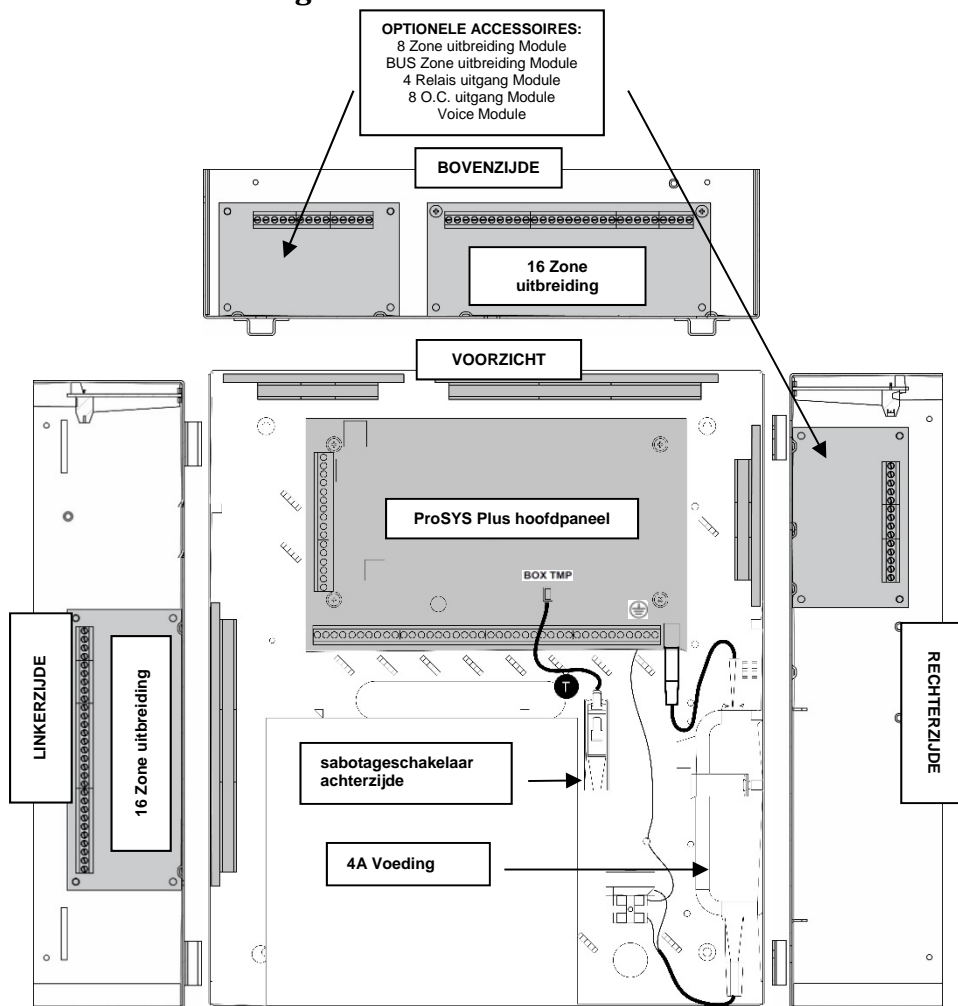


Figuur 2

1. Installeer de ProSYS Plus PCB zoals hierboven beschreven (figuur 2).
2. Installeer de optionele accessoires indien vereist.
3. Verbind de achterste sabotage geleider **1** met de BOX TMP plug.
4. Verbind de aardingsdraad met de **⊕** connector op de klemmenstrook
5. Verbind de 4A Voedingsgeleider met de PCB voedingsconnector.



LightSYS montage

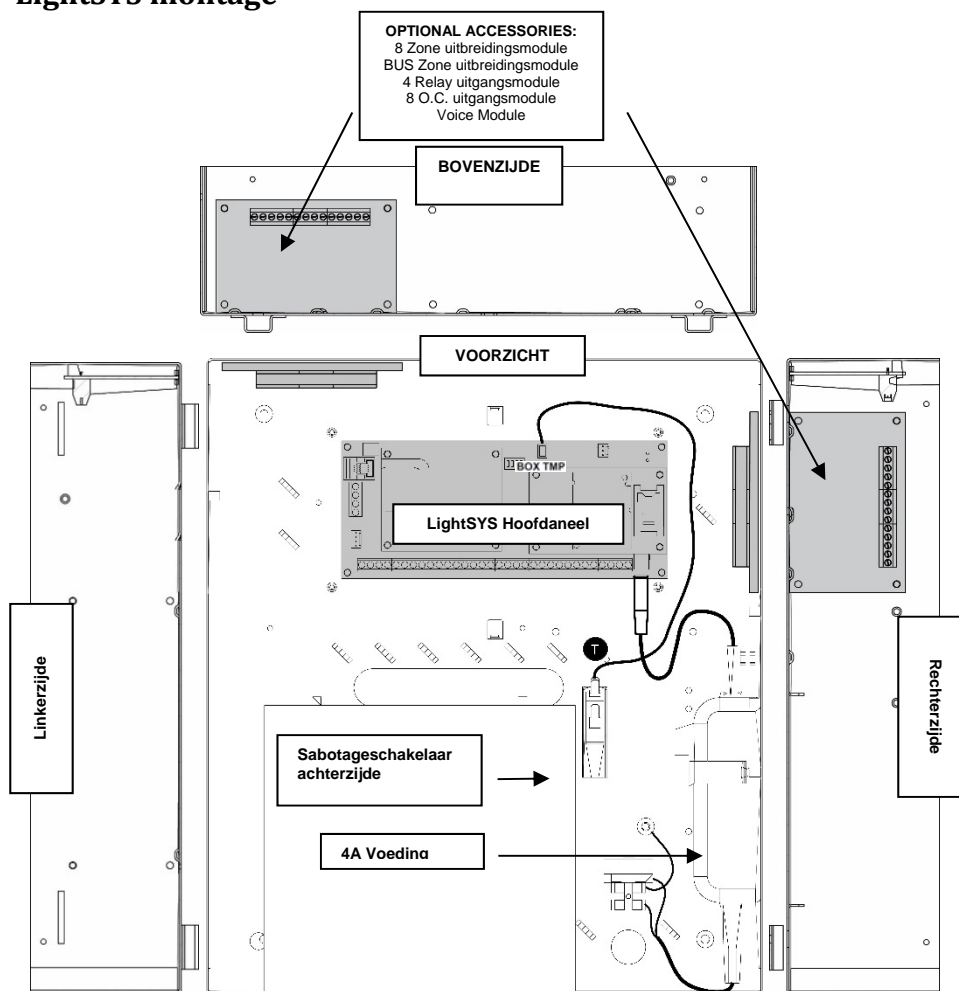

Figuur 3

1. Installeer de LightSYS PCB zoals hierboven beschreven (figuur 3).
2. Installeer de optionele accessoires indien vereist
3. Verbind de achterste sabotage geleider **T** met de BOX TMP plug.
4. Verbind de 4A Voedingsgeleider met de PCB voedingsconnector



Specificaties:

Dimensies:	375 mm x 330 mm x 98 mm
-------------------	-------------------------

Standaarden (ProSYS Plus):

EN50131-3 Graad 3 Environmental class II
--

Bestel Informatie:

Model	P/N	Beschrijving
RP512BM21	RP512BM2100A	Metalen box voor ProSYS Plus en LightSYS



Standard Limited Product Warranty

RISCO Ltd., its subsidiaries and affiliates (“**RISCO**”) guarantee RISCO’s hardware products to be free from defects in materials and workmanship when used and stored under normal conditions and in accordance with the instructions for use supplied by RISCO, for a period of (i) 24 months from the date of connection to the RISCO Cloud (for cloud connected products) or (ii) 24 months from production (for other products which are non-cloud connected), as the case may be (each, the “**Product Warranty Period**” respectively).

Contact with customers only. This Product Warranty is solely for the benefit of the customer who purchased the product directly from RISCO, or from any authorized distributor of RISCO. Nothing in this Warranty obligates RISCO to accept product returns directly from end users that purchased the products for their own use from RISCO’s customer or from any installer of RISCO, or otherwise provide warranty or other services to any such end user. RISCO customer shall handle all interactions with its end users in connection with the Warranty, inter alia regarding the Warranty. RISCO’s customer shall make no warranties, representations, guarantees or statements to its customers or other third parties that suggest that RISCO has any warranty or service obligation to, or any contractual privity with, any recipient of a product.

Return Material Authorization. In the event that a material defect in a product shall be discovered and reported during the Product Warranty Period, RISCO shall, at its option, and at customer’s expense, either: (i) accept return of the defective Product and repair or have repaired the defective Product, or (ii) accept return of the defective Product and provide a replacement product to the customer. The customer must obtain a Return Material Authorization (“**RMA**”) number from RISCO prior to returning any Product to RISCO. The returned product must be accompanied with a detailed description of the defect discovered (“**Defect Description**”) and must otherwise follow RISCO’s then-current RMA procedure in connection with any such return. If RISCO determines in its reasonable discretion that any Product returned by customer conforms to the applicable warranty (“**Non-Defective Products**”), RISCO will notify the customer of such determination and will return the applicable Product to customer at customer’s expense. In addition, RISCO may propose and assess customer a charge for testing and examination of Non-Defective Products.

Entire Liability. The repair or replacement of products in accordance with this warranty shall be RISCO’s entire liability and customer’s sole and exclusive remedy in case a material defect in a product shall be discovered and reported as required herein. RISCO’s obligation and the Warranty are contingent upon the full payment by customer for such Product and upon a proven weekly testing and examination of the product functionality.

Limitations. The Product Warranty is the only warranty made by RISCO with respect to the Products. The warranty is not transferable to any third party. To the maximum extent permitted by applicable law, the Product Warranty does not apply and will be void if: (i) the conditions set forth above are not met (including, but not limited to, full payment by customer for the product and a proven weekly testing and examination of the product functionality); (ii) if the Products or any part or component thereof: (a) have been subjected to improper operation or installation; (b) have been subject to neglect, abuse, willful damage, abnormal working conditions, failure to follow RISCO’s instructions (whether oral or in writing); (c) have been misused, altered, modified or repaired without RISCO’s written approval or combined with, or installed on products, or equipment of the customer or of any third party; (d) have been damaged by any factor beyond RISCO’s reasonable control such as, but not limited to, power failure, electric power surges, or unsuitable third party components and the interaction of software therewith or (e) any delay or other failure in performance of the product attributable to any means of communications, provided by any third party service provider (including, but not limited to) GSM interruptions, lack of or internet outage and/or telephony failure.



BATTERIES ARE EXPLICITLY EXCLUDED FROM THE WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY APPLICABLE THERETO, IF ANY, IS THE BATTERY MANUFACTURER'S WARRANTY.

RISCO makes no other warranty, expressed or implied, and makes no warranty of merchantability or of fitness for any particular purpose. For the sake of good order and avoidance of any doubt:

DISCLAIMER. EXCEPT FOR THE WARRANTIES SET FORTH HEREIN, RISCO AND ITS LICENSORS HEREBY DISCLAIM ALL EXPRESS, IMPLIED OR STATUTORY, REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS WITH REGARD TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND LOSS OF DATA. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, RISCO AND ITS LICENSORS DO NOT REPRESENT OR WARRANT THAT: (i) THE OPERATION OR USE OF THE PRODUCT WILL BE TIMELY, SECURE, UNINTERRUPTED OR ERROR-FREE; (ii) THAT ANY FILES, CONTENT OR INFORMATION OF ANY KIND THAT MAY BE ACCESSED THROUGH THE PRODUCT BY CUSTOMER OR END USER SHALL REMAIN SECURED OR NON DAMAGED. CUSTOMER ACKNOWLEDGES THAT NEITHER RISCO NOR ITS LICENSORS CONTROL THE TRANSFER OF DATA OVER COMMUNICATIONS FACILITIES, INCLUDING THE INTERNET, GSM OR OTHER MEANS OF COMMUNICATIONS AND THAT RISCO'S PRODUCTS, MAY BE SUBJECT TO LIMITATIONS, DELAYS, AND OTHER PROBLEMS INHERENT IN THE USE OF SUCH MEANS OF COMMUNICATIONS. RISCO IS NOT RESPONSIBLE FOR ANY DELAYS, DELIVERY FAILURES, OR OTHER DAMAGE RESULTING FROM SUCH PROBLEMS. RISCO WARRANTS THAT ITS PRODUCTS DO NOT, TO THE BEST OF ITS KNOWLEDGE, INFRINGE UPON ANY PATENT, COPYRIGHT, TRADEMARK, TRADE SECRET OR OTHER INTELLECTUAL PROPERTY RIGHT
IN ANY EVENT RISCO SHALL NOT BE LIABLE FOR ANY AMOUNTS REPRESENTING LOST REVENUES OR PROFITS, PUNITIVE DAMAGES, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF THEY WERE FORESEEABLE OR RISCO HAS BEEN INFORMED OF THEIR POTENTIAL.

RISCO does not install or integrate the product in the end user security system and is therefore not responsible for and cannot guarantee the performance of the end user security system which uses the product.

RISCO does not guarantee that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection.

Customer understands that a correctly installed and maintained alarm may only reduce the risk of burglary, robbery or fire without warning, but is not an assurance or a guarantee that such an event will not occur or that there will be no personal injury or property loss as a result thereof. Consequently RISCO shall have no liability for any personal injury, property damage or loss based on a claim that the product fails to give warning.

No employee or representative of RISCO is authorized to change this warranty in any way or grant any other warranty.

RTTE Compliance Statement:

Hereby, RISCO Group declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For the CE Declaration of Conformity please refer to our website: www.riscogroup.com.



Contacting RISCO Group

RISCO Group is committed to customer service and product support. You can contact us through our website (www.riscogroup.com) or at the following telephone and fax numbers:

United Kingdom

Tel: +44-(0)-161-655-5500
support-uk@riscogroup.com

Belgium (Benelux)

Tel: +32-2522-7622
support-be@riscogroup.com

Spain

Tel: +34-91-490-2133
support-es@riscogroup.com

Italy

Tel: +39-02-66590054
support-it@riscogroup.com

USA

Tel: +1-631-719-4400
support-usa@riscogroup.com

Israel

Tel: +972-3-963-7777
support@riscogroup.com

France

Tel: +33-164-73-28-50
support-fr@riscogroup.com

China (Shanghai)

Tel: +86-21-52-39-0066
support-cn@riscogroup.com

Australia

Tel: +1800-991-542
support-au@riscogroup.com



ProSYS Plus only



All rights reserved.

No part of this document may be reproduced in any form without prior written permission from the publisher.